

Toyota RAV4-MK4

Description :

The OBD Saver disables effectively every access to ECUs via OBD – Interface (e.g. electronic immobilizer). The OBD – interface is locked with the OBD Saver. Thus connecting any device to the OBD interface is impossible and the connection to the car their fore denied.


When locked by the OBD Saver your car is protected very effectively. The control unit which controls the ignition of your car cannot be deactivated via OBD. From this time on your car will only start with the original ignition keys!

Scope of delivery :


- > 1x OBD-Saver enclosure including the lock
- 2x keys
- > 1x allen wrench 2,5 / 3
- > 1x mounting bracket / 2x fillister head screw M5
- Ix mounting material for the mounting bracket
- ➢ 3x allen wrench M3 + 1x spare screw
- 2x window sticker

pictured mounting instruction under www.obd-saver.de

Mounting :

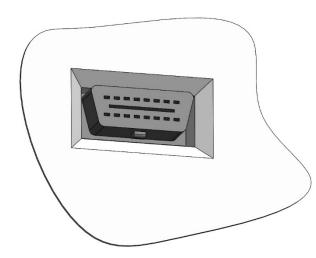

• remove the original OBD socket jack from it's housing (it's often times located behind the plastic panel)

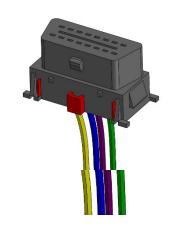

• remove the plastic lugs marked red (e.g. witch a sharp knife)

- push the socket jack into the OBD-Saver housing. (The socket jack – barbs have to be fully pressed into the housing!)
- mount both (housing and socket jack) onto the mounting bracket with the provided fillister screws
- Mount the 3 parts (mounting bracket with lower OBD Housing & OBD socket jack) with the car frame
 - → see pictures on the following pages



- Plug in the lock and fix it with the provided M3 screws
- Close the OBD-Saver and remove the key



