





## Mounting Instruction

### OBD-Saver Land Rover

support mounting frame for cars with automatic gear box

### Evoque & Discovery Sport


		<ul style="list-style-type: none"><li>• remove the footwell insulation panel</li><li>• remove the screw located on the right hand site next to the OBD socket jack</li></ul>
		<ul style="list-style-type: none"><li>• Push the frame between car frame and covering sheet metal</li><li>• Mount the support frame with the screw which you just removed.</li></ul>
		<ul style="list-style-type: none"><li>• Declip the OBD socket jack and put it through the support frames hole.</li></ul>
		<p>remove the plastic lug (see OBD saver mounting intruction)</p>



- push the socket jack into the OBD-Saver housing. (The socket jack – barbs have to be fully pressed into the housing!)



- Mount the lower OBD enclosure with the provided fillister screws onto the support frame

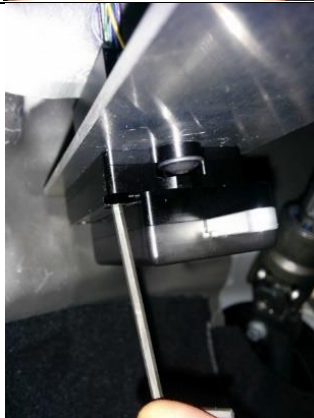

- Plug in the lock and fix it with the provided allen screws



- Close the OBD-Saver and remove the key